



## **Cleaning Ekocoil LEV Plate Heat Exchanger**

The heat exchanger should be removed from casing before cleaning. Submerge the heat exchanger to water with washing agent. For best result, use washing agent with pH above 10. Washing agents used for cleaning electronic filters are suitable also for cleaning heat exchangers. Follow the manufacturer's instructions for proper mixture and soaking time. After soaking, rinse the heat exchanger with water spray. **Do not use high pressure washer!** If the outside temperature is below 0°, make sure the device is dry before start-up.

The need for cleaning depends on the operating environment. To ensure efficient heat transfer, the exchanger should be cleaned at least once a year. Energy consumption will increase, if the heat transfer part does not function properly due to fouling.